VOGIO

TOGO K2 PLUS

PORTABLE COFFEE MACHINE

USER MANUAL

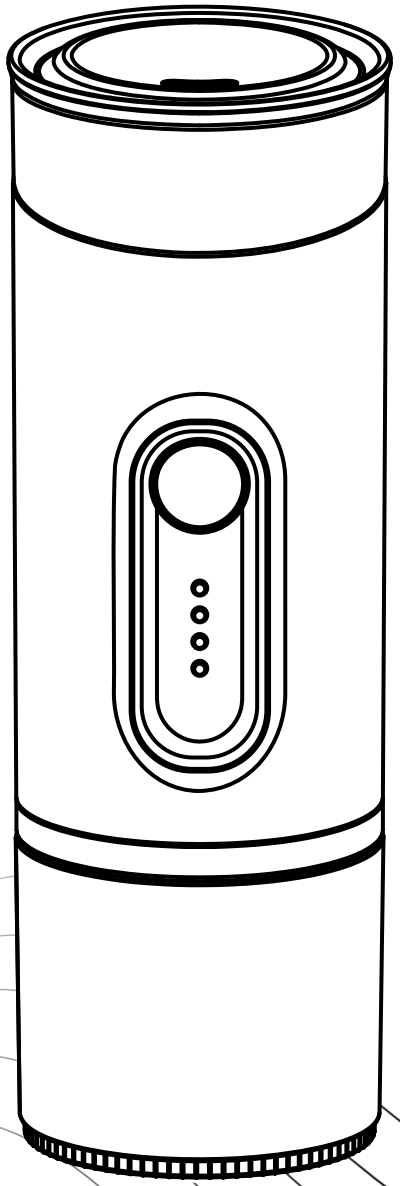

EN

Thank you for purchasing a VOGIO product.

Please read this manual before using the device.

Learn more

https://vogio.pl/

EN

WARNINGS

Read the following information carefully before using the coffee machine to avoid injury or damage to the device.

• This product is intended for personal use only.

• After unpacking, make sure the product is undamaged and all accessories are included.

• Keep packaging and accessories out of the reach of children.

• Keep this product out of the reach of children while charging.

• Do not use or store the product in hot places or in direct sunlight.

• Before each heating, make sure **there is water in the tank**. **Never start heating without water.** Heating without water may damage the device.

• Continuous heating may overheat the device and trigger thermal protection. If this happens, wait 10 minutes for the device to cool down before using it again.

• Do not leave the coffee machine unattended while charging, especially with a car charger. This prevents hazards from possible charging faults.

• To ensure a tight seal during brewing, make sure the capsule holder is screwed onto the device.

• Be careful when drinking hot coffee to avoid scalding.

• Do not put the coffee machine in a dishwasher, oven, microwave or any other heating appliance.

• Do not put any liquid other than water into the tank.

• Do not fill the water tank above the maximum level.

• Do not open the water tank lid during heating to avoid scalding.

• Be careful when removing the capsule after extraction, as it may be hot.

• Wipe the surface of the device with a dry cloth after each use.

• Do not use parts or accessories not recommended by the manufacturer, as this may cause damage.

• Stop using the coffee machine if it malfunctions.

LED INDICATORS

Switching on

Press and hold the Start button for 3 seconds. The device switches on with a beep and all indicators light up.

During operation

The indicators light up in sequence from top to bottom.

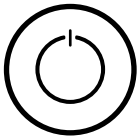

Switching off

Press and hold the Start button for 3 seconds. The device switches off with a beep and all indicators go out.

CHARGING THE DEVICE

Battery level

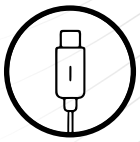

Use the cable supplied with the device for charging.

Press the Start button once – the indicators show the current battery level.

100%

When the battery is fully charged (100%), all 4 indicators are lit.

75%

When the battery is charged to 75%, the third indicator is lit.

50%

When the battery is charged to 50%, the second indicator is lit.

25%

When the battery is charged to 25%, the bottom indicator is lit steadily.

A continuously flashing bottom indicator means the battery is low and needs charging. Switching the device off stops the flashing.

CLEANING AND MAINTENANCE

Do not immerse the main body in water!
Do not rinse the main body under running water!
Other removable parts can be washed under water.

Before first use, wash the inside of the water tank.
After washing, do not insert a capsule or ground coffee. Run the first extraction cycle with water only to clean the inside of the device.

Clean the coffee machine after each use. Let the device dry completely before storing it. If you do not plan to use the product for a long time, store it in a dry place.

PRODUCT FEATURES

1. Compact size and low weight

It is currently one of the smallest and lightest espresso machines on the market, making it truly portable.

2. Thoughtful design

• Optimised battery layout for maximum use of space.

• The product has double-layer insulation, and the water tank is made of food-grade materials.

3. Precise extraction

Compliant with ECBC standards – strict control of temperature, pressure and flow delivers a cup of smooth coffee with rich crema. Brewing time is also tightly controlled, ensuring even extraction, optimal water penetration through the ground coffee, and perfect colour and aroma.

EN

4. One-button operation

The built-in lithium battery lets you brew at the touch of a button. No more time-consuming manual pumping as with traditional portable machines – easily prepare a cup of high-quality coffee.

5. Dual use

This coffee machine can be used with capsules and ground coffee. One device, two brewing methods – choose the one you need.

6. Two extraction modes

A. Direct extraction mode: Pour in hot boiled water to make coffee quickly.

B. Heating mode: The built-in MCH ceramic heating plate heats the drinking water in the tank before brewing.

7. Enjoy coffee anytime

On a business trip, an excursion, on the road or on a walk
– this machine lets you make coffee whenever you need it.

PRODUCT DIAGRAM

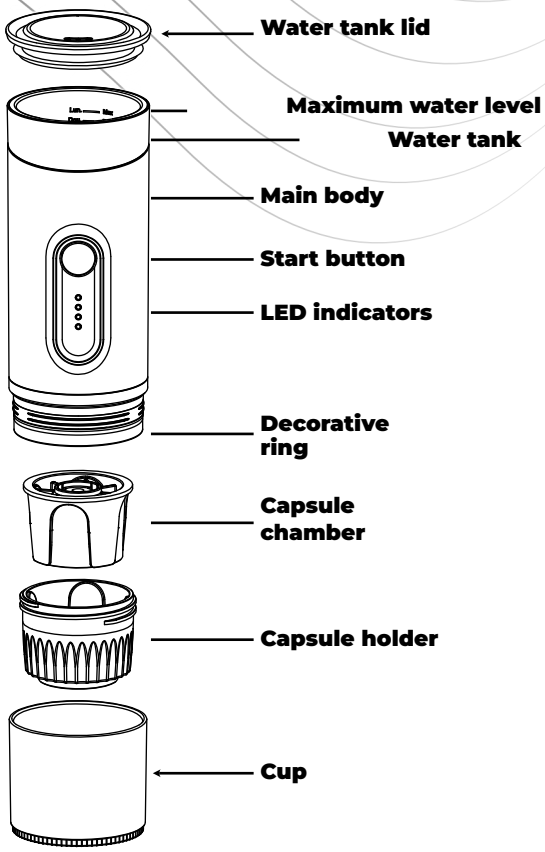

Capsule coffee accessories	Ground coffee accessories
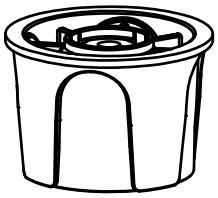 Capsule chamber Compatible with Nespresso® capsules and other brands with the same specifications	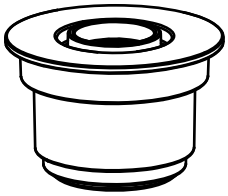 Ground coffee holder  coffee scoop

Note:
Make sure you use the correct accessories when brewing coffee.

Nespresso® is a trademark of Société des Produits Nestlé S.A.

TECHNICAL SPECIFICATIONS

INPUT VOLTAGE	DC 5 V
HEATING POWER	140 W
CHARGING PORT	**Type-C**
CHARGING METHOD	**Type-C cable**
PRESSURE	15 bar
NET WEIGHT	700 g
WATER TANK CAPACITY	**Max. 90 ml**
WATER TANK MATERIAL	**Food-grade stainless steel**
HEATING FUNCTION	**Yes**

BUILT-IN BATTERY CAPACITY

3 cells, 2600 mAh each

COFFEES PER CHARGE

Approx. 400 cups – using hot water.

4–5 cups – with cold water heating

EXTRACTION TEMPERATURE

92 °C

COMPATIBILITY

Nespresso® capsules and other brands with the same specification

Ground coffee

EN

USE

This product is a portable coffee machine designed for coffee lovers, for brewing both capsule and ground coffee. Follow the instructions below during use:

Before use, check that the battery is sufficiently charged. If the bottom indicator flashes continuously, charge the device immediately.

CAPSULE COFFEE EXTRACTION

1

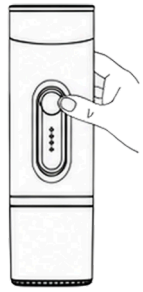

1. Press and hold the Start button for 3 seconds. The device switches on with a beep and the indicators light up.

2

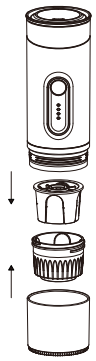

2. Remove the bottom parts and clean them.

3

3. Place the capsule in the capsule chamber, then insert it into the capsule holder.

4

4. Screw the capsule holder firmly onto the main body.

5

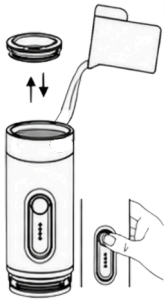

5. Remove the top lid and pour drinking water into the tank. Close the lid and turn it slightly. If using cold water, press the Start button twice to start heating. If using hot water, skip heating and start extraction. The device starts heating with a beep and the bottom indicator flashes.

6

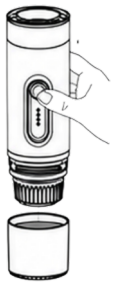

6. Wait 3-4 minutes. When all indicators are lit steadily, heating ends with a long beep. Press the button again to start coffee extraction. You can stop extraction manually by pressing the button while it is running.

Nespresso® is a trademark of Société des Produits Nestlé S.A.

GROUND COFFEE EXTRACTION

❶

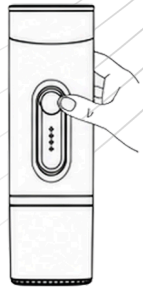

1. Press and hold the Start button for 3 seconds. The device switches on with a beep and the indicators light up.

❷

2. Remove the bottom parts and clean them.

❸

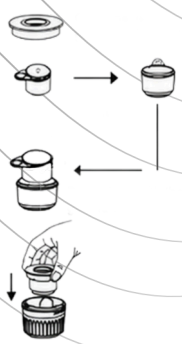

3. Open the lid of the ground coffee holder.
- Add ground coffee.
- Tamp the coffee with the coffee scoop.
- Insert the ground coffee holder into the capsule holder.

❹

4. Screw the capsule holder firmly onto the main body.

❺

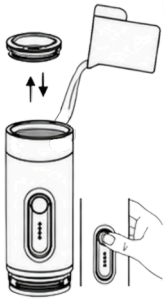

5. Remove the top lid and pour drinking water into the tank. Close the lid and turn it slightly. If using cold water, press the Start button twice to start heating. If using hot water, skip heating and start extraction. The device starts heating with a beep and the bottom indicator flashes.

❻

6. Wait 3-4 minutes. When all indicators are lit steadily, heating ends with a long beep. Press the button again to start coffee extraction. You can stop extraction manually by pressing the button while it is running.

Allow at least 5 minutes between heating cycles.

If boiling water is available, pour it in directly to brew coffee – this saves time and battery power.

Warning: Dry-run protection

1. Do NOT switch on heating when there is no water in the tank. Dry heating shortens the life of the heating element.

2. If heating mode is switched on with no water in the tank, the device beeps 5 times and stops heating (dry-run alarm).

3. If the dry-run alarm is triggered by accident, wait at least 10 minutes for the device to cool down before adding water and brewing coffee normally.

EN

This manual is also available in other languages at vogio.pl.

VOGIO SP. Z O.O.
AL. WOJSKA POLSKIEGO 7
05-084 LESZNO, POLAND
WWW.VOGIO.PL
KONTAKT@VOGIO.PL

Learn more

https://vogio.pl/