EN

VOGIO

TOGO B1

Portable blender

USER MANUAL

Read this manual carefully before use and keep it for future reference.



Li-Ion

21
PAP

MADE IN CHINA RoHS

SAFETY INSTRUCTIONS

Store the product in a dry place. Do not carry or use the device in humid environments to avoid damage to the internal electrical circuits.

Do not expose the product to direct sunlight or store it in hot places. High temperatures may shorten the life of electronic components, damage the battery or deform plastic parts.

Do not expose the product to very low temperatures, as this may damage the electronics.

Do not disassemble the device yourself. This may damage it and void the warranty.

Do not drop the product on the floor or other hard surfaces. Impact may damage the device.

Do not clean the product with strong chemicals or detergents. Do not scratch the surface with sharp objects.

Take care when charging. Overly long, continuous charging may shorten battery life. Fully charge the device before first use.

If the device is not used for a long time, charge it at least once a month. This prevents over-discharge and battery damage.

A battery exposed to very low air pressure may explode or leak flammable liquid or gas.

For optimal battery performance, use the device at a suitable ambient temperature.

The product is made of eco-friendly materials. The PCTG container is food-safe, BPA-free and complies with CE, RoHS, FCC and LFGB requirements.

Package contents



❶ Product packaging



❷ Lid



❸ Blender jar



❹ USB-C cable



❺ Base unit



❻ Screw-off bottom cap



❼ User manual

PRODUCT AND PARTS DESCRIPTION

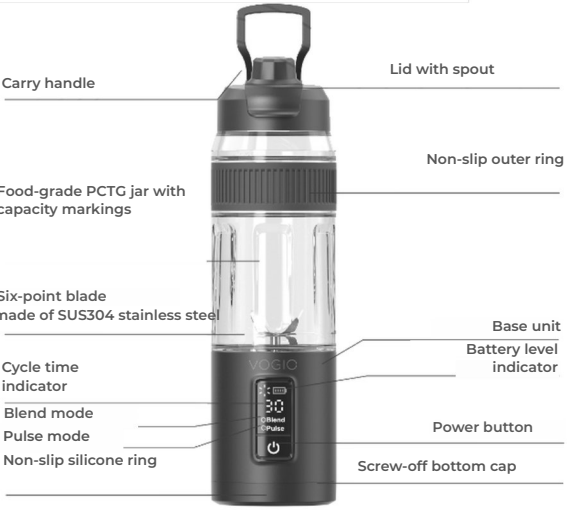

TECHNICAL SPECIFICATIONS

Model	VOGIO TOGO B1
Jar capacity	600 ml
Jar material	PCTG
Base material	ABS
Blade material	304 stainless steel
Operating voltage	12 V
Power	220 W
Charging voltage / current	5 V ⎓ 2 A
Battery type / capacity	18650 / 3 × 2000 mAh
Motor	540 / 18000 RPM
Charging time	approx. 3–4 hours
Single blending cycle time	30-second cycle
Max. operating time in Pulse mode	30 seconds

FIRST USE

Before blending for the first time, make sure the device is fully charged. All indicators should be lit green.

Screw the jar onto the base so that the arrow on the jar is aligned with the power button.

Clean the device immediately after each use.

USAGE TIPS

*** Blend mode:**

Ideal for smoothies, shakes and cocktails.

*** Pulse mode:**

For making sauces and jams and blending small pieces of soft frozen fruit – gives you more control over the texture.

CHARGING THE BATTERY

Connect the USB cable to a USB wall charger - charger not included. Connect the other USB-C end to the USB-C port on the device.

The battery indicator flashes while charging. When fully charged, the indicators stay solid green.

Fully charging the lithium-ion battery with a 5 V / 2 A USB charger takes about 4 hours.

Use a good-quality USB charger.

When the battery is low and only one bar remains on the indicator, charge the device immediately.

- Do not use the device while charging.
- Disconnect the charging cable before use.

The device charging voltage is 5 V. Before charging, make sure the USB adapter has a 5 V output.

HOW TO USE

Step 1



Cut fruit into small pieces before putting it in the jar. Ingredients should fill about 60% of its capacity.

Step 2



Add a drinkable liquid so that the contents do not exceed about 80% of the jar capacity.

Step 3



Screw the lid on tightly and tilt the blender down to make sure no fruit pieces are stuck under the blades.

⚠ **Important**

Make sure the arrow on the jar is aligned with the power button. Otherwise, the safety lock stays active and the blender will not start.

Gently shaking the blender up and down during operation helps prevent the blades from jamming.

Step 4



SELECT OPERATING MODE

Blend mode

Hold the power button to turn the device on. Then press the power button once to start blending. The LED indicators light up. While blending, you can gently tilt the device back and forth. To stop, press the button again.

Pulse mode

Press the power button twice to enter Pulse mode. Then press and hold the button to run short pulse cycles. Pulse mode turns off automatically after 5 seconds of inactivity and the LED indicators go out.

Step 5



Unscrew the bottom cap from the base and screw it onto the jar. This lets you take the jar with you easily.

ADDITIONAL TIPS



With the bottom cap fitted, you can easily take your drink, juice or smoothie with you.



The USB port is splash-proof, but the base is not designed to be immersed in water or washed in a dishwasher. Water may get inside and damage the battery or electronics.



Do not blend fruit with hard shells, nuts or large pieces of frozen fruit.

Cut fruit and vegetables into pieces of about 2.5 cm. This helps prevent blade jamming and overload protection from activating.

TROUBLESHOOTING

Problem	Possible cause	Solution
Device does not work or white indicators are lit and the battery indicator flashes for 5 seconds	Battery is discharged	Charge the device for 3–4 hours and make sure the battery is fully charged.
Device does not turn on and red and white indicators flash alternately for 2 seconds	Safety lock activated	Screw the jar tightly onto the base and make sure the arrow on the jar is aligned with the power button.
Device stops and all indicators flash red for 8 seconds	Ingredients are too thick, there are too many, or motor overload protection has activated	**Add liquid or cut ingredients into smaller pieces, then restart the device.**
Liquid leakage	Seal fitted incorrectly or jar/ lid not screwed on properly	Check the seals and that the jar and lid are screwed on correctly.
Device does not fully charge after more than 4 hours	Unsuitable charging cable or adapter used.	Check the charging cable and adapter. Make sure charging parameters are 5 V / 2 A.

SYMBOLS AND PICTOGRAMS



Not dishwasher safe



Keep away from fire



Not microwave safe



Caution – fragile product



Food-safe product

CLEANING AND STORAGE

The main part of the device, i.e. the base with electronics, must not be washed under running water. Clean the surface only with a damp cloth.

Never immerse the base in water or any other liquid.

Other parts, such as the top lid, jar and bottom cap, can be washed under water.

After cleaning, store the product in a dry place.

DISPOSAL AND RECYCLING



The symbol on the product or its packaging means that the product must not be disposed of with household waste.

Take the used product to an appropriate collection point for recycling electrical and electronic equipment.



For more information, contact your local authority or waste management company.

Devices with batteries must be disposed of in accordance with local regulations. Take used batteries to a designated recycling point to ensure safe and eco-friendly disposal.

ABOUT THIS MANUAL

Every effort has been made to ensure the information in this manual is as accurate and up to date as possible. The manual and product may change without prior notice. The latest information will be available on the manufacturer's website in case of product updates or improvements.

EN

This manual is also available in other languages at vogio.pl.

Scan for more

https://vogio.pl/

VOGIO SP. Z O.O.
AL. WOJSKA POLSKIEGO 7
05-084 LESZNO, POLAND
WWW.VOGIO.PL
KONTAKT@VOGIO.PL